



SYSTEM SETUP	
SYSTEM STANDARD	: PAL (AUST)
BUZZER TIME	: 2 (SEC 1 to 99)
LOSS ALARM	: ON (VIDEO LOSS)
AUDIO RECORD	: ON
AUDIO MUTE	: (OFF)
(AUDIO CHANNEL	: 1)
PASSWORD SETUP	(initially set to ^ 6 times and than RETURN)
TIME SETUP	(use down arrow to change actual numbers)

MAIN MENU
SYSTEM SETUP
CAMERA SETUP
RECORD SETUP
RECORD SCHEDULE
MOTION SETUP
(SENSOR SETUP)
HARD DRIVE SETUP
(NETWORK SETUP)
SYSTEM RESTORE

CAMERA SETUP	
CAMERA	: CH1
LIVE ON/OFF	: ON (SELECTED FOR MON OUTPUT)
RECORD ON/OFF	: ON (RECORD TO HARD DRIVE)
BRIGHT	: 5
CONTRAST	: 5
COLOURS	: 5
AUTO SWITCHING	: 2
<i>Press &gt;&gt; to access other cameras</i>	

RECORD SETUP	
RECORD SETUP	: EACH
VIDEO QUALITY	: HIGH
RECORD FRAME RATE	: 25 (total for 4 channels ie 25=6.25/cam)

HARD DRIVE SETUP	
OVERWRITE ENABLED	(YES)
MASTER HDD SIZE	XXXMB
MASTER HDD USED	XXMB %
MASTER HDD FORMAT	(DO FOR NEW HDD)
<i>For new hard drives ensure HDD USED= 0% by formatting</i>	

Notes:

When hard drive not fitted or not detected –  
DVR will pwer down after booting up.