


ICM SYSTEM OPERATING INSTRUCTIONS

Gyross P/L

Date: 31 October 2008

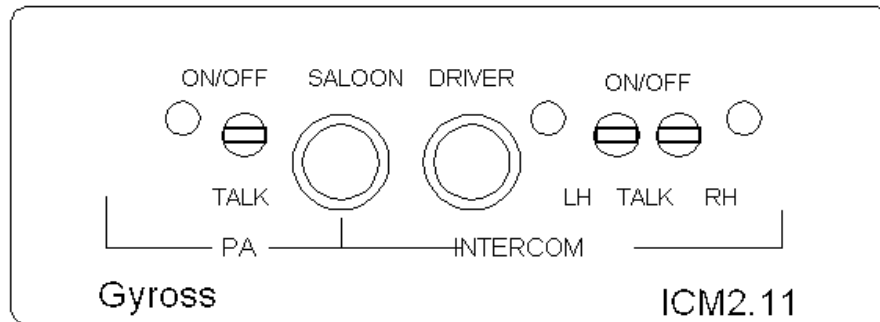

Turn on bus ignition-

ICM LH and **RH** green LEDs will be illuminated.

Note: Will also power up for approximately 7 minutes when any switch (TALK, LH and RH) is operated.

1/ PA Operation

Press **TALK** switch down and hold- driver can now talk to Saloon with driver **MA6** microphone.

Or

Press **TALK** switch up (ON/OFF) momentarily- driver can talk to saloon. (cancel this operation by pressing **TALK** switch up or down)

Adjust volume with **SALOON** knob.

2/ INTERCOM Operation

Passengers can talk to the driver by pressing **ST1** station buttons- **LH** or **RH** LED will flash to indicate which channel is talking.

Adjust driver's volume with **DRIVER** knob.

Driver can talk to **LH** or **RH** **ST1** stations by pressing down **LH** or **RH** switches.

Note: Whilst driver is talking, passenger will not be able to talk via **ST1** to driver.

If Passenger is annoying the Driver push **LH** or **RH** up to **ON/OFF**- LED will go out and when the annoying passenger presses the **ST1** button ICM will just beep once and LED will flash.

A beep can only occur now when the button is pressed after 5 minutes has elapsed.

Normal operation is restored when-

- Driver talks on that channel (LH or RH).
- Ignition is turned off then back on.