


FREE CONNECTOR REAR VIEW FEMALE PIN

FREE CONNECTOR FRONT VIEW FEMALE PIN

WIRING SIDE

GYROSS PART NUMBERS-
 P/N 0001-281 CONNECTOR BODY
 P/N 0001-282 CONNECTOR FEMALE PIN
 P/N 0001-288 & 0001-289 CRIMP TOOL
 P/N 0001-290 PIN REMOVER

IMPORTANT: PLEASE ADD TO BUS SERVICE SCHEDULE TO TEST OPERATION OF WS2 ON A REGULAR BASIS.

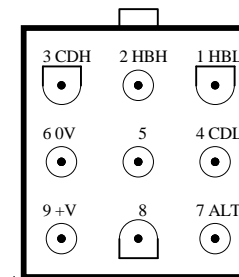

WS2 PANEL CONNECTOR FRONT VIEW MALE PINS


TEST TABLE

SEQUENCE	INPUTS			WARNING
	H/B	CD	ALT	
1	ON	SHUT	ON	OFF
2	OFF	SHUT	ON	OFF
3	OFF	SHUT	OFF	ON
4	OFF	OPEN	ON	ON
5	OFF	SHUT	ON	ON
6	ON	OPEN	OFF	OFF


X= DONT CARE

VOLUME ADJUSTMENT

FOR SAFETY USE 2 PEOPLE TO PERFORM WITH ONE ALWAYS IN DRIVERS SEAT.
 1/ REMOVE WS2 LID SCREWS.
 2/ ACTIVATE WS2 BY-
 HANDBRAKE ON, ENGINE ON, FRONT DOOR & CAB DOOR OPEN THEN RELEASE HANDBRAKE.
 3/ ADJUST VR1 ON PCB.

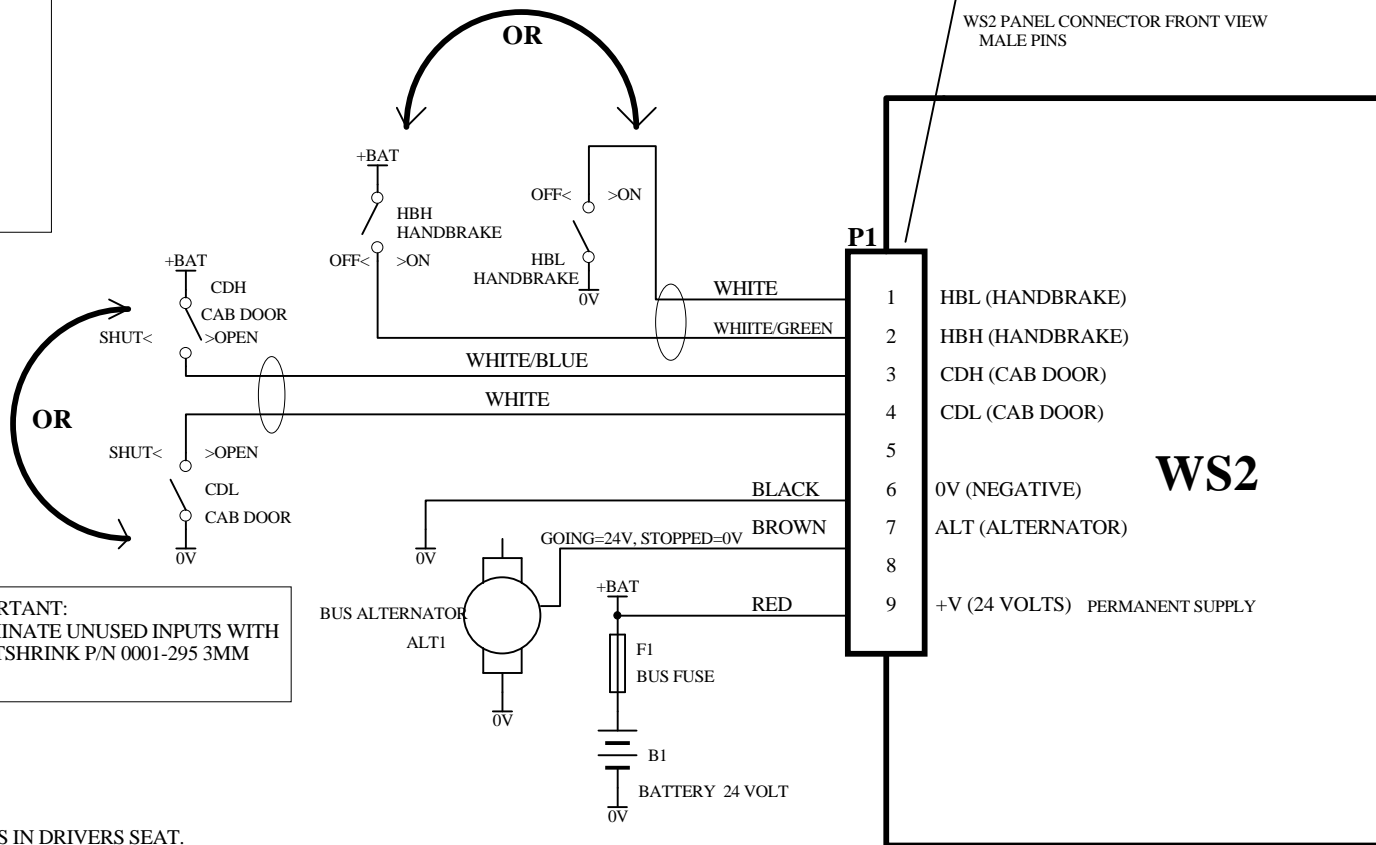

IMPORTANT:
 TERMINATE UNUSED INPUTS WITH HEATSHRINK P/N 0001-295 3MM DIA.

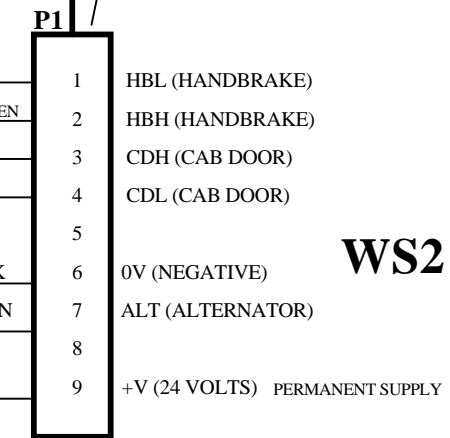

Title WS2 BLOCK WIRING DIAGRAM		
Size A4	Number GYROSS P/L	Revision REVISED: 9 MAY 2011
Date: 9-May-2011	Sheet of	
File: W:\PROJECTS\...\WS2BD.SCH	Drawn By:	